

## Arch Pro

Arch Pro is an mbed enabled development board for rapid prototyping. It is a variant of mbed LPC1768 with built-in Ethernet, USB Host/Device, Grove connectors and Arduino form factor. With a variety of Shield and Grove modules and lots of software libraries for Arch Pro, you can implement Ethernet, USB Host/Device and NFC applications rapidly and easily.

### Features

- mbed enabled
- Online development tools
- Easy to use C/C++ SDK
- Handy libraries
- Arduino form factor with two Grove connectors
- Drag-n-drop programming
- Debug using CMSIS-DAP
- USB virtual serial for communication

## Specifications

Parameter	Value/Availability
MCU	NXP LPC1768 variant (with ARM Cortex-M3 core)
Clock Speed	100 MHz
Flash	512 KB
RAM	64KB
UART	4 No.s
I2C	3 No.s
SPI	2 No.s
Ethernet	Yes
USB Host/Device	Yes


## Platforms Supported

- mbed.

## Application Ideas

- Ethernet
- USB Host or Device
- NFC
- RTOS
- Lua

## Hardware Overview

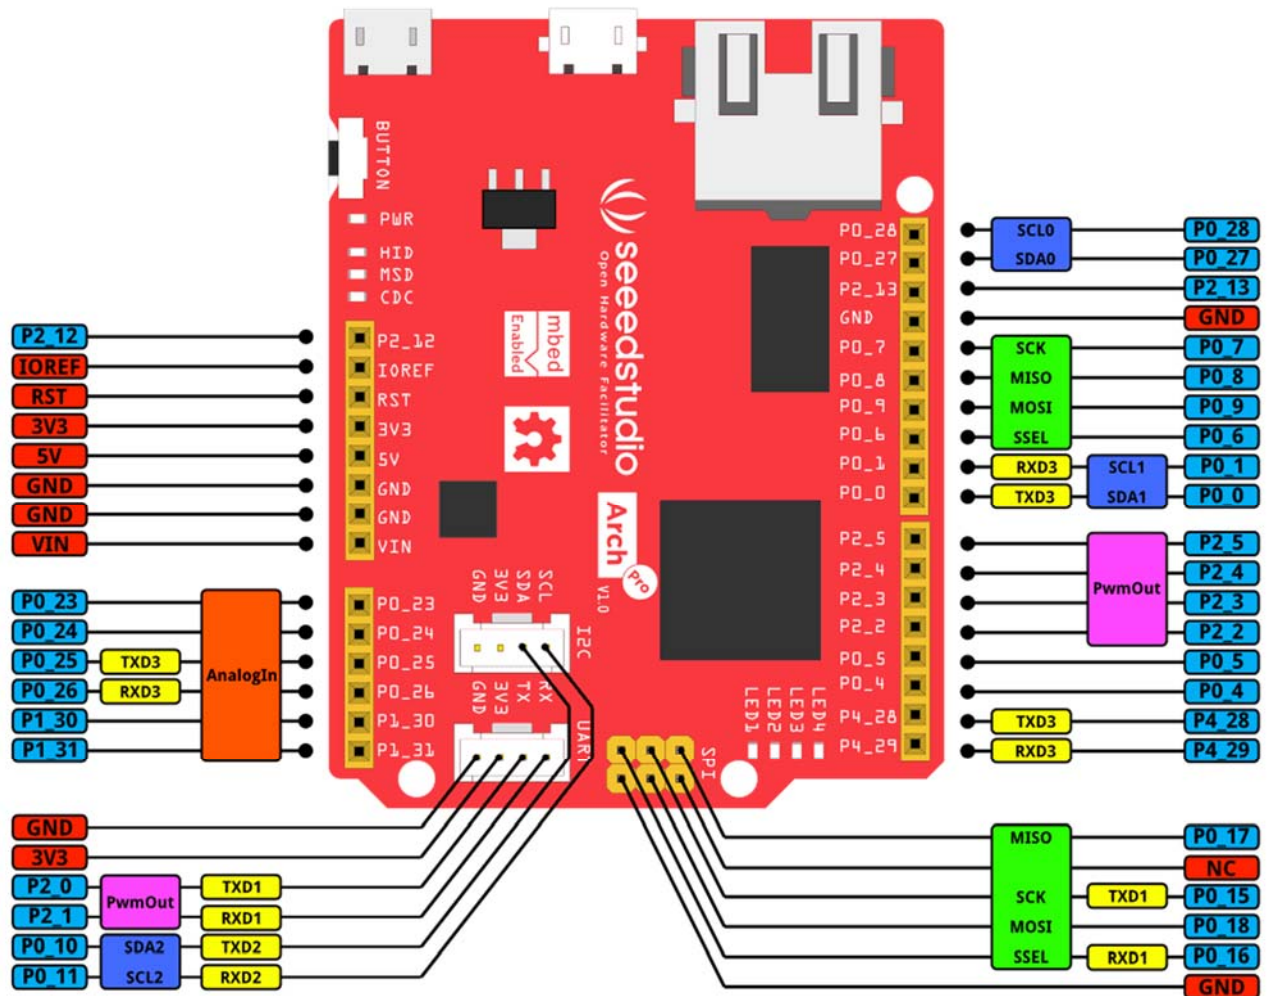

There is a monochrome version for you to print.

### Note

The Arch Pro silkscreen for the Grove connectors is labeled 3V3 on top of the PCB and 5V on the underside. Grove Vcc is by default 3V3, but can be changed to 5V by moving R50 to R51. SPI Vcc pin can be set by populating R52 (3V3) or R53 (5V) with 0R - neither populated by default.

## Getting Started


As the Arch Pro is compatible with mbed LPC1768, one can use the mbed C/C++ SDK, libraries and online development tools to rapidly build a prototype. Here we show how to light up an LED. This can be done in less than 10 minutes.

Step one : Sign up for an mbed account.

- Open [mbed.org](http://mbed.org), click Login or signup. If you have already registered, please click login directly.

Step two : Enter online development tools.

- Click Compiler, it opens the online mbed IDE. Before programming, it is better to read the mbed Compiler Getting started.

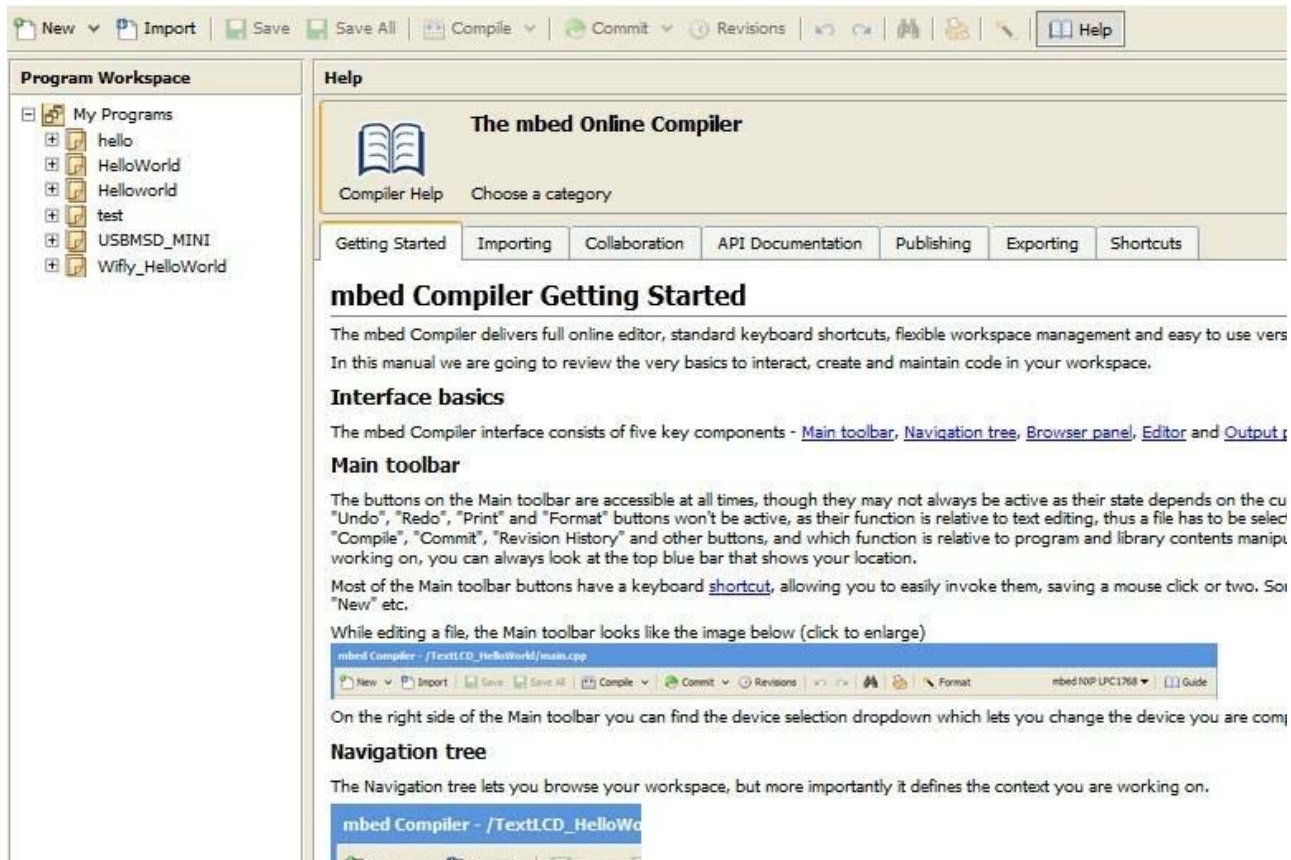

Step three : Edit code.

- Click "New" in the left top corner to create a Program and edit a blink program in main.cpp file.

```

1#include "mbed.h"
2
3DigitalOut led1(LED1);
4
5int main() {
6    while(1) {
7        led1 = !led1;
8        wait(0.5);
9    }
10}


```

Step four : Add a device.

- Click "No device selected" in the top right corner, then click "Add a device" button in the bottom left as seen in the picture below.

**Note**

If you have already used an mbed device, it will be seen in the top right corner instead of "No device selected".

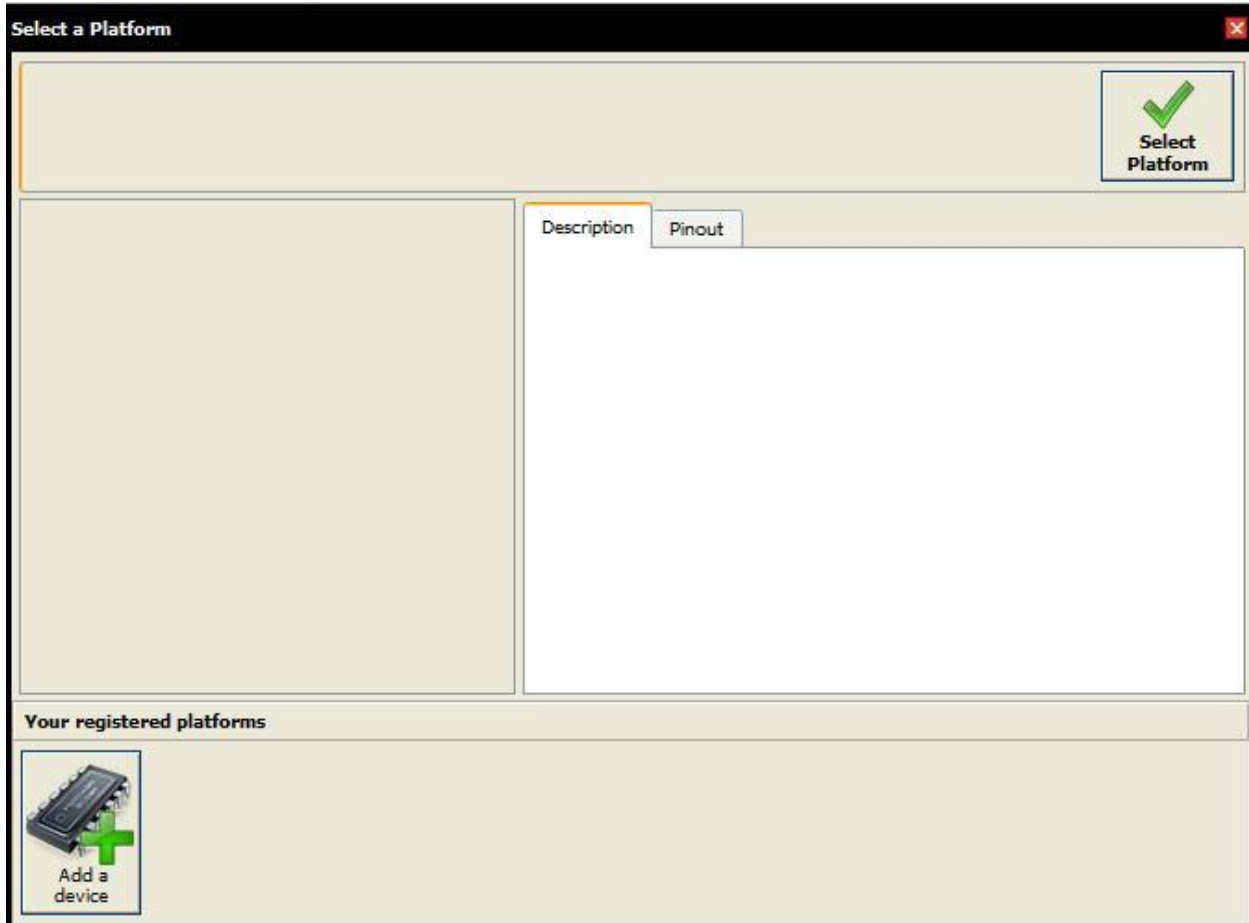

- A pop-up page appears with a list of devices as shown below. Select "mbed LPC1768".

## Platforms



- Enter mbed LPC1768 page and click "Add to mbed Compiler". Now you have successfully added Mbed LPU1768. Return to mbed compiler page and click "No device selected". After you click "LPC1768" in the bottom left corner, a screen appears as shown below.

**Select a Platform**

**mbed LPC1768**

Click the "Select" button to compile for the mbed LPC1768 platform.

**Description** | **Pinout**

Rapid Prototyping for general microcontroller applications, Ethernet, USB and 32-bit ARM® Cortex™-M3 based designs

**Overview**

The mbed Microcontrollers are a series of ARM microcontroller development boards designed for rapid prototyping.

\* Find out more about [all mbed Microcontrollers](#)

The mbed NXP LPC1768 Microcontroller in particular is designed for prototyping all sorts of devices, especially those including Ethernet, USB, and the flexibility of lots of peripheral interfaces and FLASH memory. It is packaged as a small DIP form-factor for prototyping with through-hole PCBs, stripboard and breadboard, and includes a built-in USB FLASH programmer.

**Your registered platforms**

mbed LPC11U24 | mbed LPC1768 | Add a device

**Pinout Diagram:**

GND	3v	3.3v Regulated Out	VOUT
VIN	4.5v - 9.0v In	5.0v USB Out	VU
VIO			IP-
nR			IP+
pS	PROG		RD-
pS	PROG SPI		RD+
pZ	IO	Ethernet	TD-

- You can see the selected board in mbed online compiler after clicking "Select Platform".

Step five : Compile, download.

- Click "Compile". On successful compilation, the mbed IDE generates a bin file. Save the bin file on your PC.

Step six : Update firmware.

- Connect the USB interface (next to 'BUTTON') of Arch Pro to your PC using a USB Micro B cable; It automatically appears as a USB device named MBED.
- Copy the generated bin file to MBED device (on your PC). Now the USB device disappears and reappears.
- Press BUTTON of Arch Pro, you will see an LED flashing.

## Debug

To enable SWD debug or to get debug message through USB Virtual serial, please install the driver from mbed.

## Update or Restore Firmware

The latest firmware version for the Arch Pro is v0221 built on Jan 28 2015. To check your firmware version and build date, open the MBED.HTM or DETAILS.TXT of your MBED disk in a text editor.

- [Firmware v221 2015-01-28 for Arch Pro] Fix Mac OS X 10.10 Yosemite read only file system bug
- [Firmwarev02032014-09-02forArchPro](<https://github.com/xiongyihui/CMSIS-DAP/raw/archpro/interface/mdk/lpc11u35/lpc11u35ipc1768ifmbedbootloader.bin>)[Firmwarev02032014-09-02forArchPro](<https://github.com/xiongyihui/CMSIS-DAP/raw/archpro/interface/mdk/lpc11u35/lpc11u35ipc1768ifmbedbootloader.bin>)

To update:

- A Windows or Linux computer is needed.
- Download the latest firmware.
- Press and hold the Arch Pro's BUTTON and power it ON.
- A disk named MBED LOADER will appear.
- Drag-n-drop the downloaded firmware into the disk.

#### Notes

- LocalFileSystem does not work: As the Arch Pro does not have external flash to store files, the LocalFileSystem is not available for this board.
- P0\_27 & P0\_28 do not work with DigitalOut: P0\_28 & P0\_27 are open-drain digital I/O for compatible with I2C. External pull-up resistors are needed to provide output functionality.
- USB Serial Communication: In Windows, install the mbed Windows serial port driver to use USB Serial Communication. Have a look at Windows Serial Configuration

## Resources

- Arch Pro V1.0 Schematic PDF
- Arch Pro V1.0 EAGLE Files
- LPC1768 datasheet
- LPC17xx User Manual

## Tech Support

Please submit any technical issue into our forum